


FITTING THE SHOWERHEAD BRACKET

Fig.1

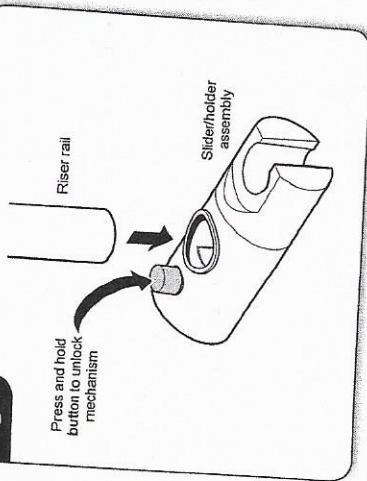

WARNING!

Check there are no hidden cables or pipes before drilling holes for wall plugs. Use great care when using power tools near water. The use of a residual current device (RCD) is recommended.

- *Fit the slider/holder assembly onto the riser rail. This can be fitted with the showerhead on either the left or right of the riser rail (fig.1).

It is the conical end of the hose which grips into the holder. The showerhead will not fit into the holder without the hose attached

IMPORTANT: If your riser rail assembly is not supplied with a hose retainer, Water Regulations require the fitting of a double check valve or similar device in the supply pipework to prevent backflow.


* Only the slider bracket is supplied unless otherwise stated.

SPARE PARTS

Ref.	Description	Part Number
88900010	KIT ARCHIE - all white	
88900011	KIT ARCHIE - all chrome	
88900012	KIT ARCHIE - all gold	
88900013	KIT ASHLEY - all white	
88900014	KIT ASHLEY - all chrome	
88900015	KIT ASHLEY - all gold	
88900016	KIT ASHLEY - all satin (painted)	
88900020	KIT CONOR - all white	
88900028	KIT CONNOR - chrome	
88900029	KIT CONOR - white (no soap dish)	
88900024	KIT JOSHUA - white	
88900025	KIT JOSHUA - satin grey	
88900026	KIT JOSHUA - chrome	

Please refer to shower installation and operating instructions for service details

22MM SLIDER Showerhead bracket

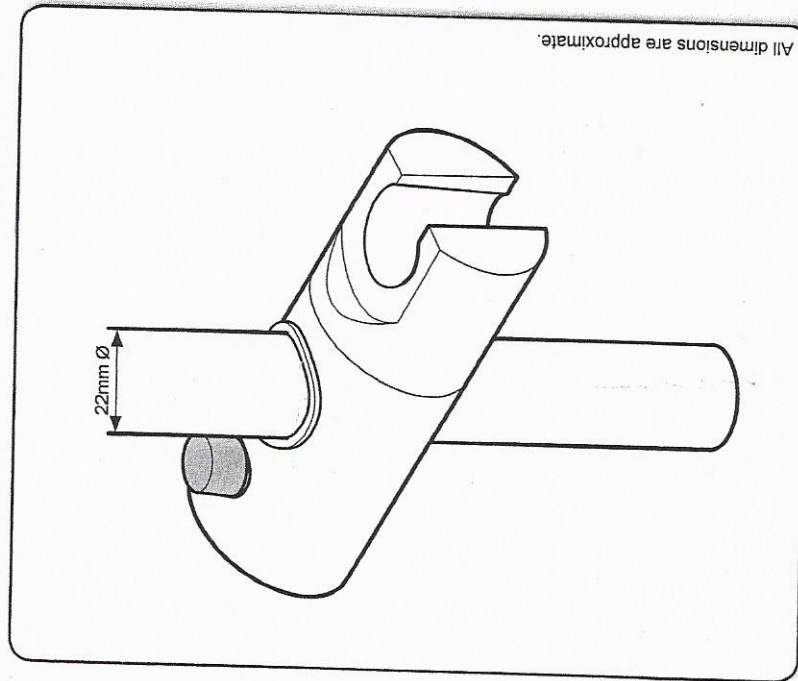

Installation Instructions

INSTALLERS PLEASE NOTE THESE INSTRUCTIONS ARE TO BE LEFT WITH THE USER